

Easy Fit Technology

12 steps to the perfect Geotone QuickLay installation

Receipt & Storage

On arrival at site, check colours correspond, quantities are correct and that there are no signs of damage.

The rolls should be safely secured in an upright position and stored at a minimum temperature of 18°C for at least 24 hours prior to installation.

Conditioning

Geotone QuickLay requires conditioning ahead of installation, this should be carried out in the same area as the installation to prevent thermally induced dimensional changes.

Product Handling

Polyflor recommend that the Geotone QuickLay flooring should be rolled out face upward taking care not to damage the surface and cut approximately to size.

Geotone QuickLay is designed for reverse lay installation to avoid slight shading differences.



1
Standard installation tools. Only Polyflor QuickLay recommended double-sided tape should be used.



2
Sweep or vacuum the floor area, check the condition of the subfloor and make good as necessary. If the substrate is highly porous a suitable primer may be required.



3
Apply the QuickLay double-sided tape around the perimeter of the room and at any doorways, set 2mm away from the edge of the room.



4
Use the appropriate method to install Geotone QuickLay in the room. Allow a 25mm overlap at the seams and cut in to form a tight seam.




5
Measure 37.5mm away from the side of the seam and mark with a straight edge or chalk line.




6
Apply the QuickLay double-sided tape along the marked seams.




7
To ensure the QuickLay tape is firmly positioned correctly, simply press down with a hand roller or cork board.

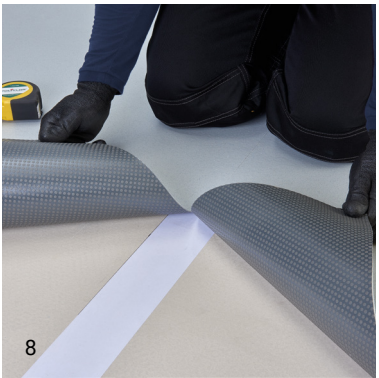

8
Check you are happy with the positioning of the flooring and the measurements are correct.

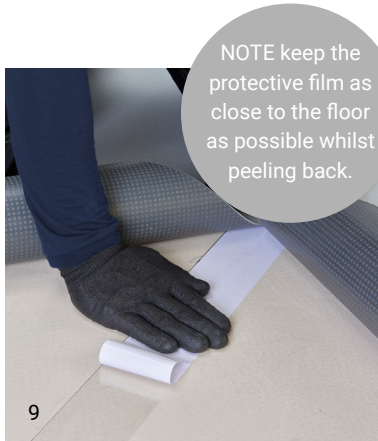

9
Carefully peel away the protective film from all areas where the tape has been applied.

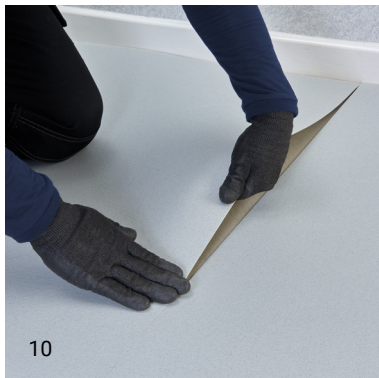


10
Once complete, place the floor covering into position ensuring a 'neat fit'.



11
A hand roller or heavy roller can be used at all seams/perimeter immediately after installing to ensure sufficient contact has been made.



12
Geotone QuickLay can be hot welded at the seams and to coved skirtings upon immediate completion of the installation.

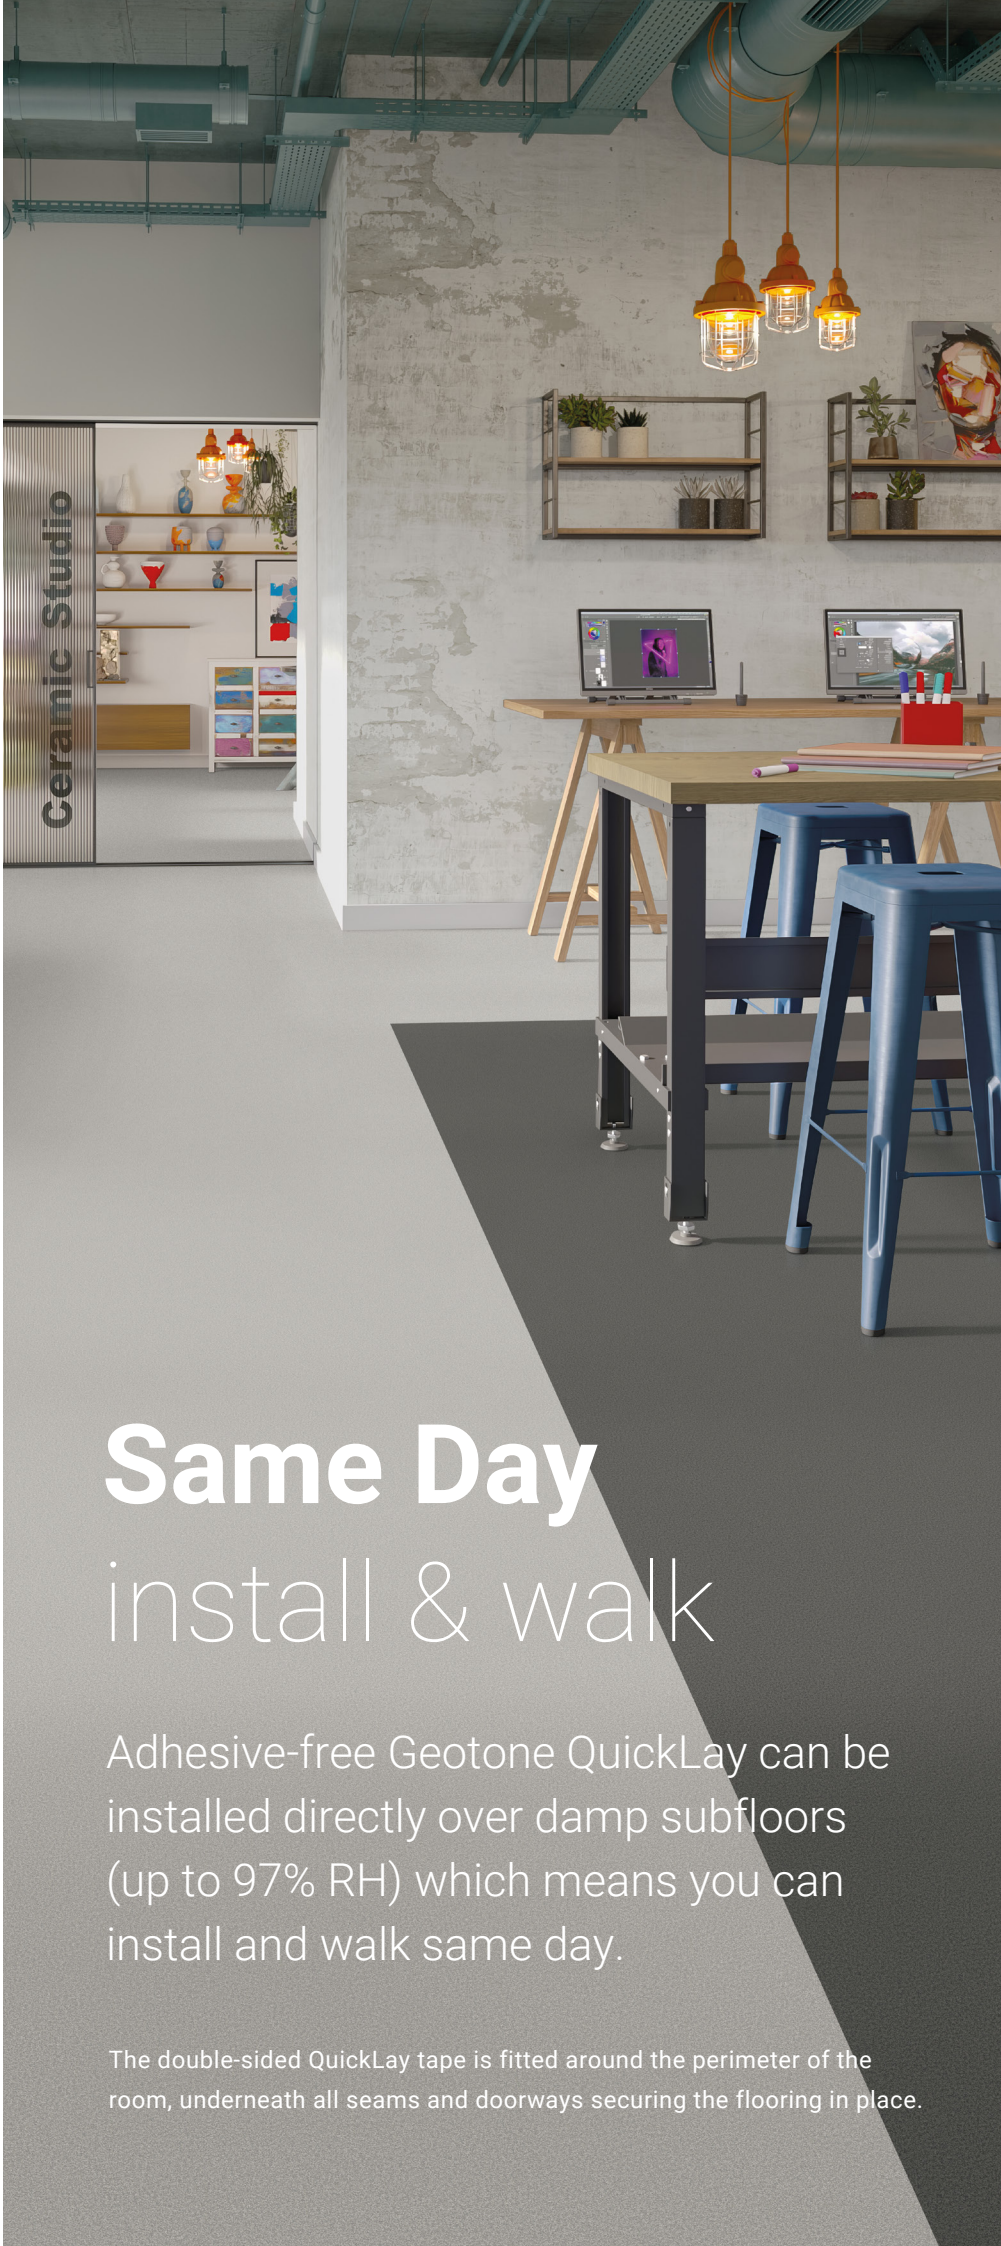

Same Day install & walk

Adhesive-free Geotone QuickLay can be installed directly over damp subfloors (up to 97% RH) which means you can install and walk same day.

The double-sided QuickLay tape is fitted around the perimeter of the room, underneath all seams and doorways securing the flooring in place.